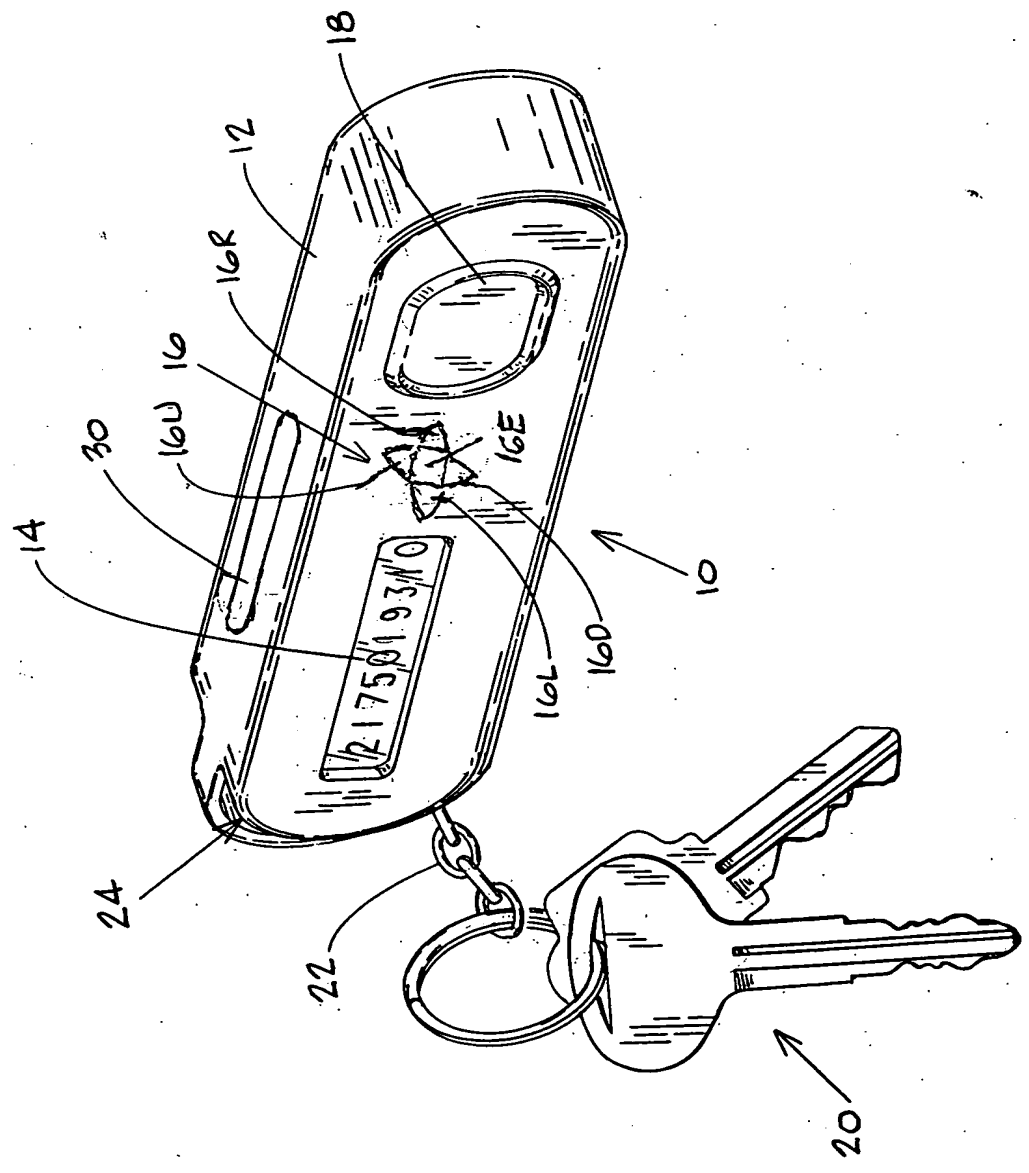


FIG. 1

FIG. 1



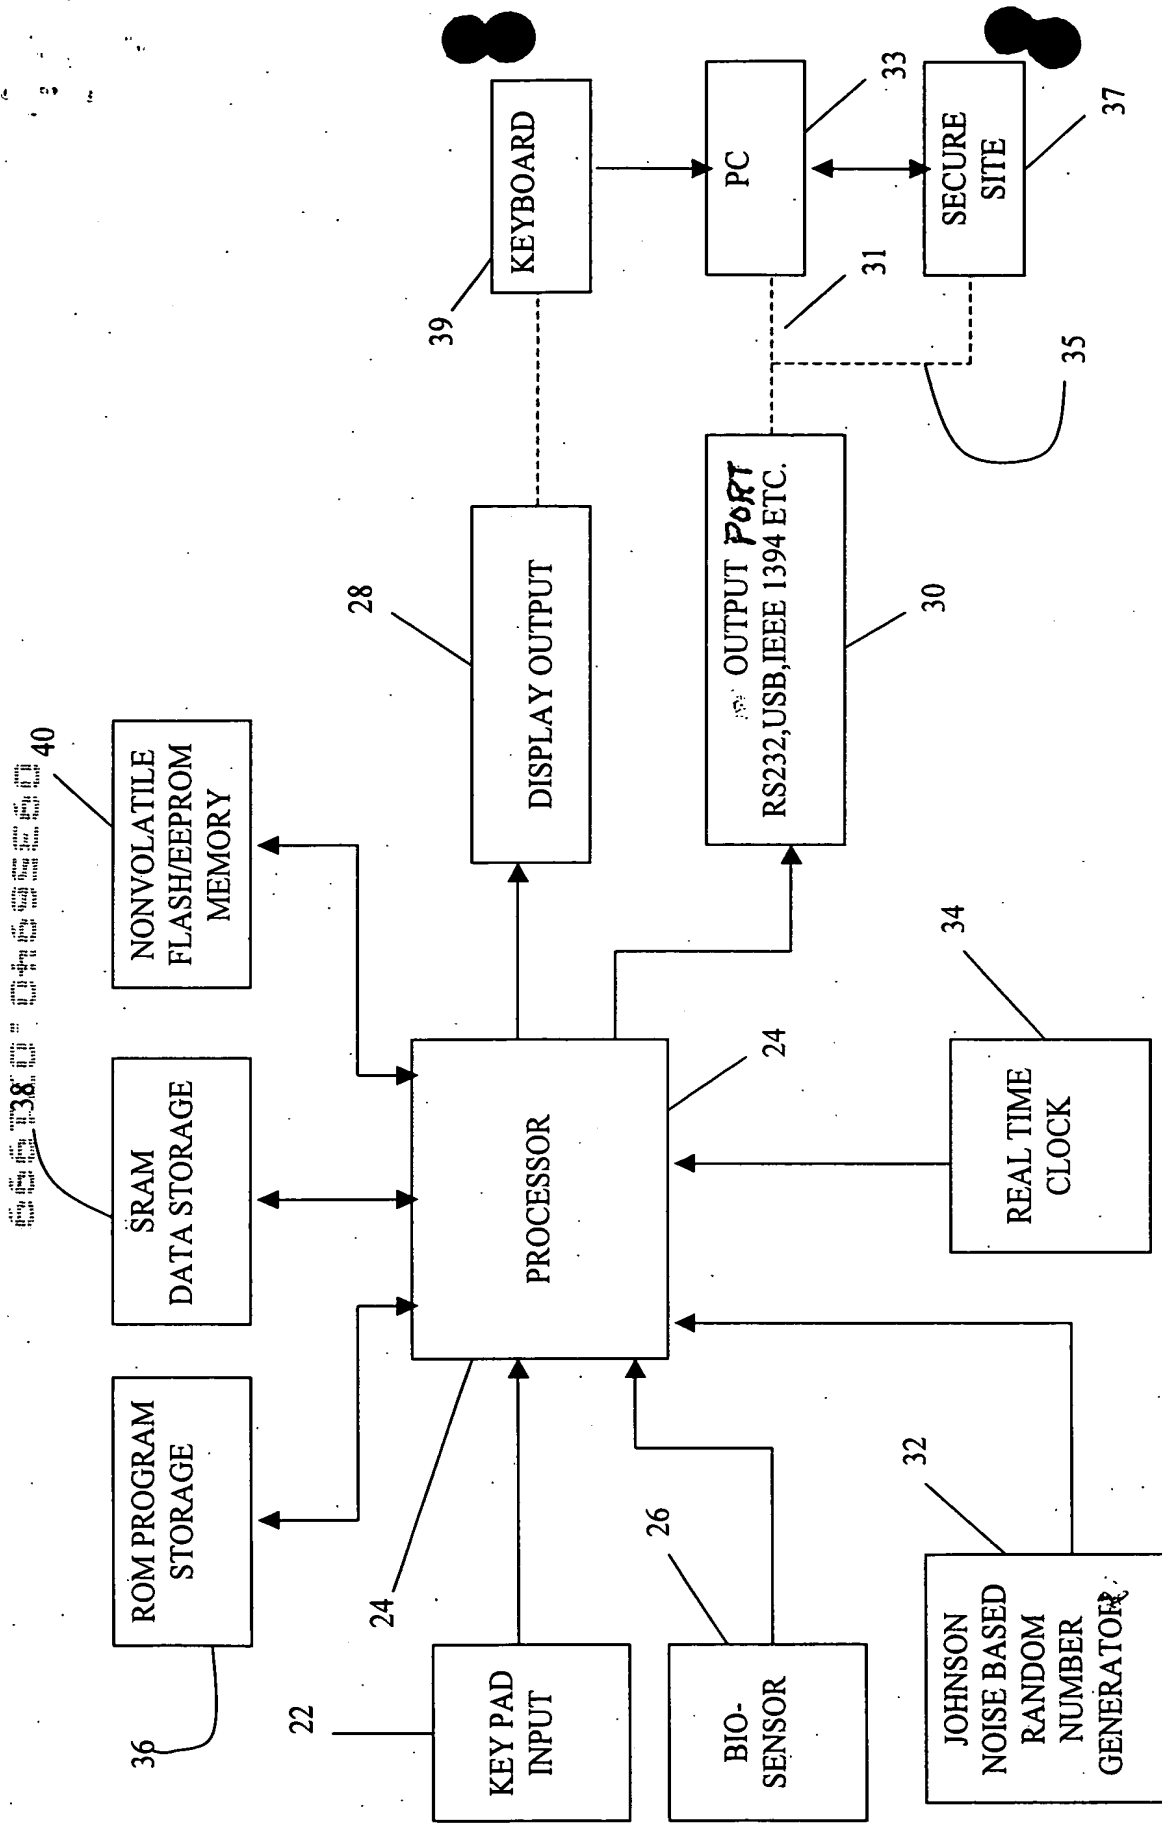


FIG. 2

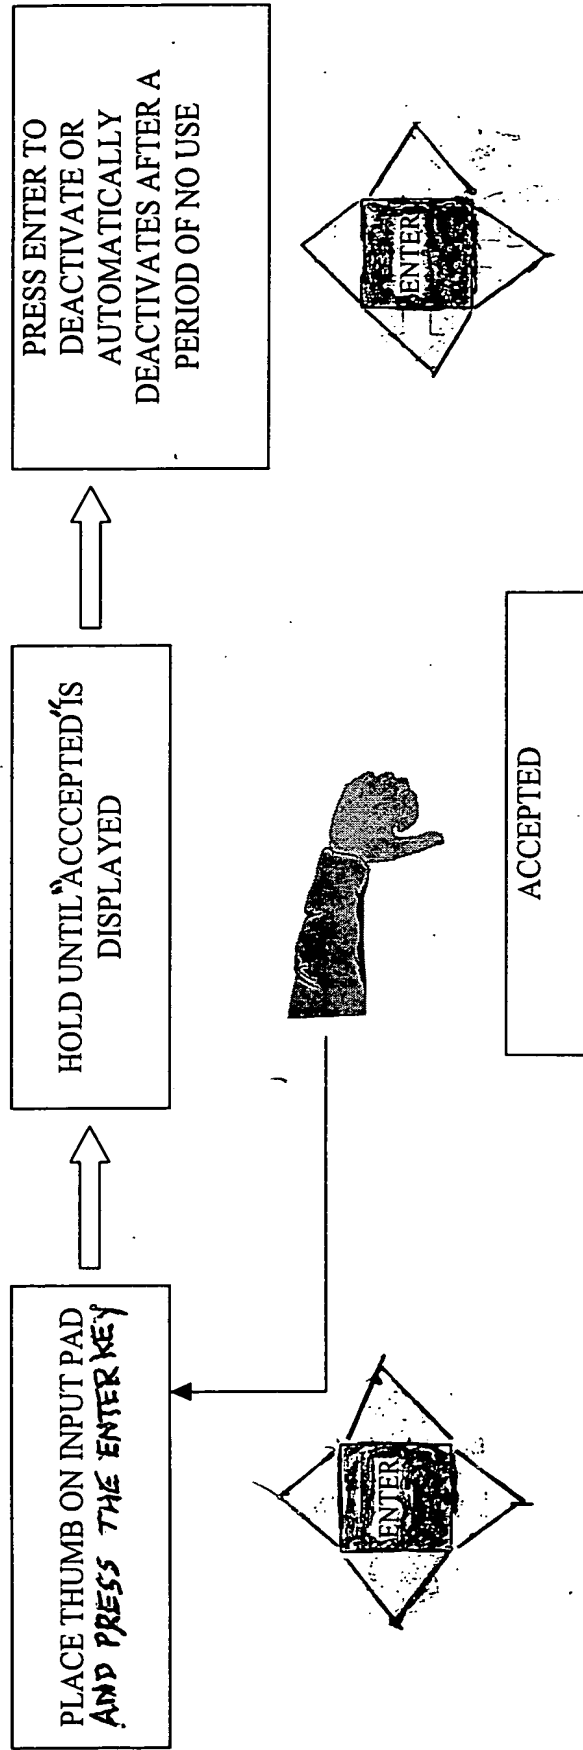


FIG. 3

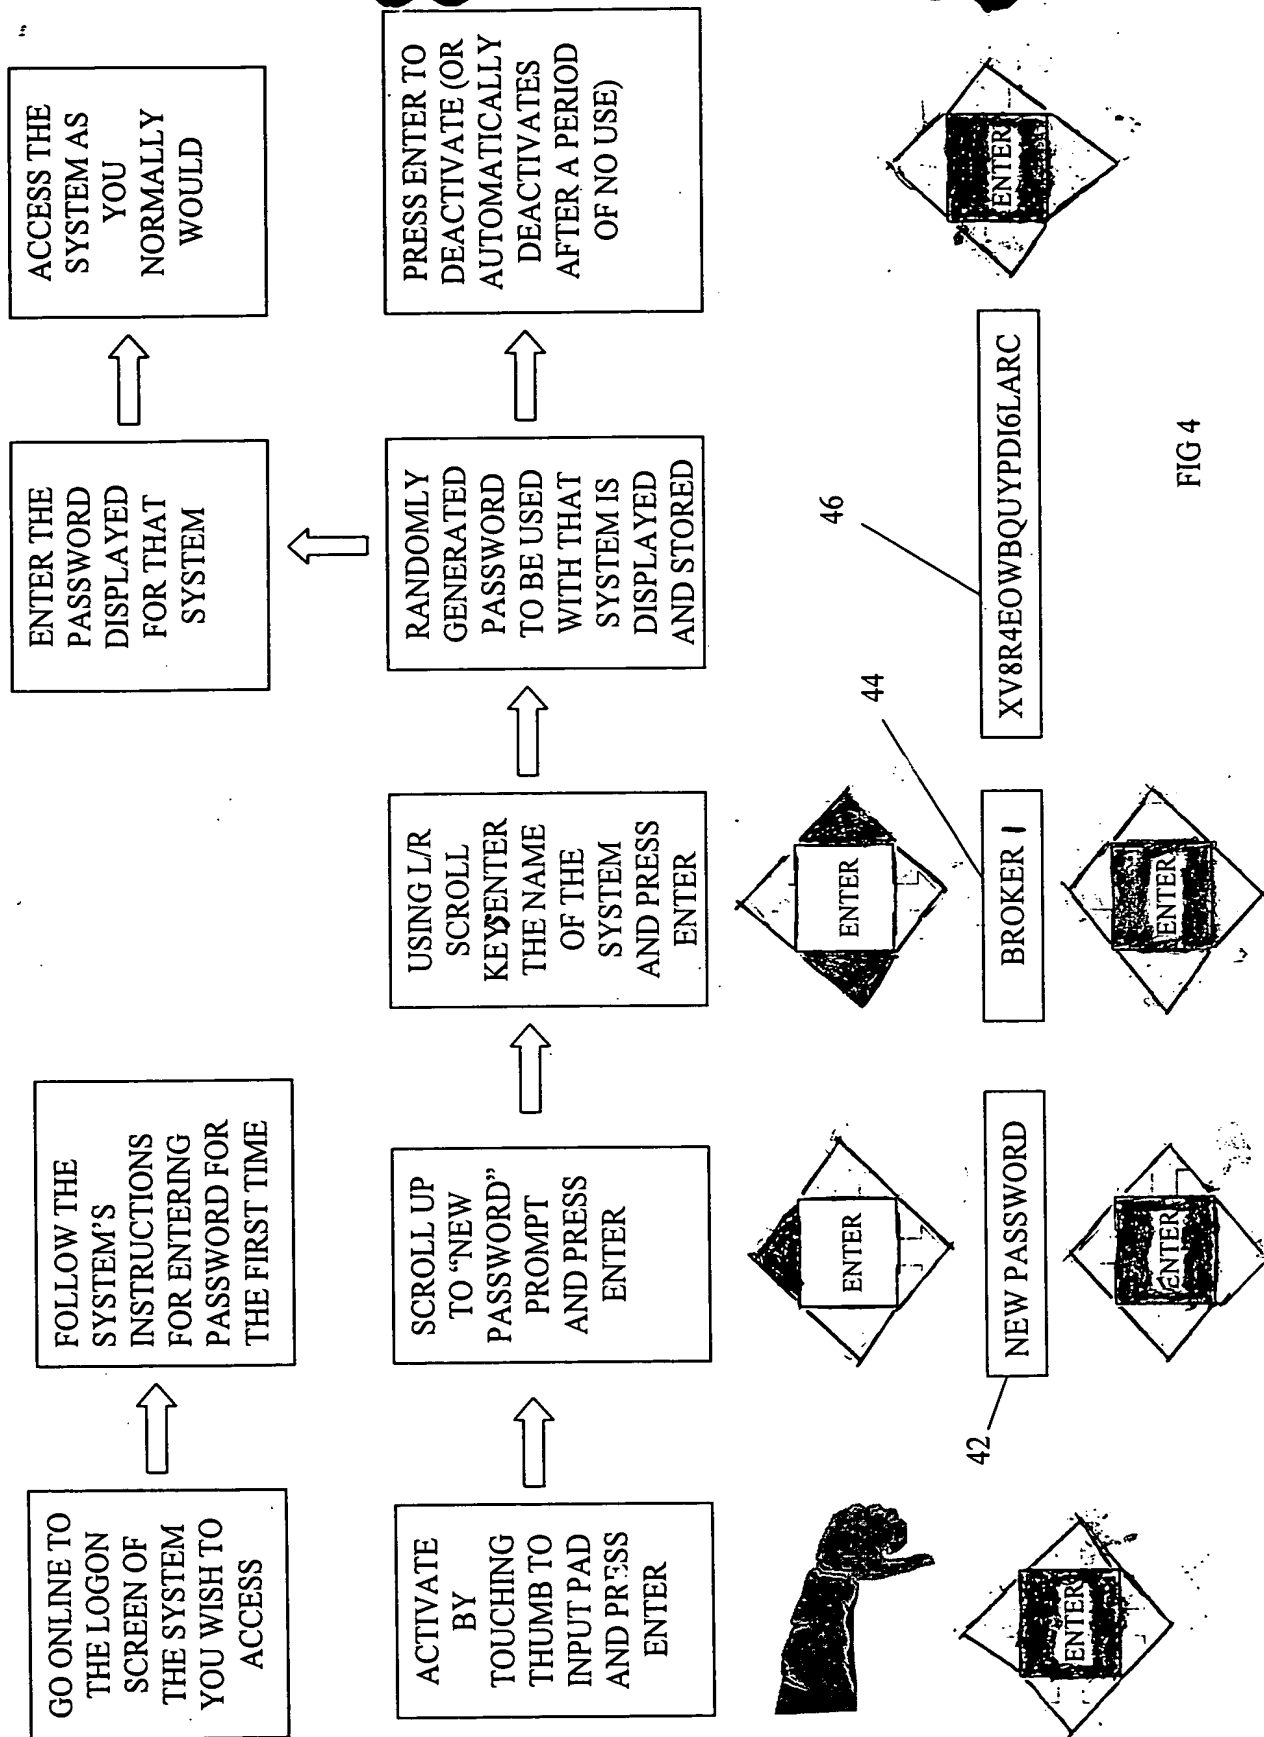


FIG 4

GO ONLINE TO  
THE LOGON  
SCREEN OF  
THE SYSTEM  
YOU WISH TO  
ACCESS



FOLLOW THE  
SYSTEM'S  
INSTRUCTIONS  
FOR ENTERING  
PASSWORD



ENTER THE  
PASSWORD  
DISPLAYED  
FOR THAT  
SYSTEM

ACCESS THE  
SYSTEM AS  
YOU  
NORMALLY  
WOULD

ACTIVATE BY  
TOUCHING  
THUMB TO  
THE INPUT  
PAD AND  
PRESS ENTER




SCROLL DOWN  
TO THE NAME  
OF THE SYSTEM  
AND PRESS  
ENTER



~~PASS~~WORD  
PREVIOUSLY  
GENERATED  
FOR THAT  
SYSTEM IS  
DISPLAYED



PRESS ENTER TO  
DEACTIVATE (OR  
AUTOMATICALLY  
DEACTIVATES  
AFTER A PERIOD  
OF NO USE)

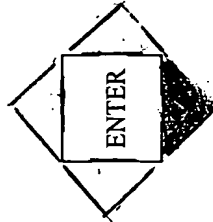

BROKER /



XV8R4EOWBQUYPD16LARC



FIG 5

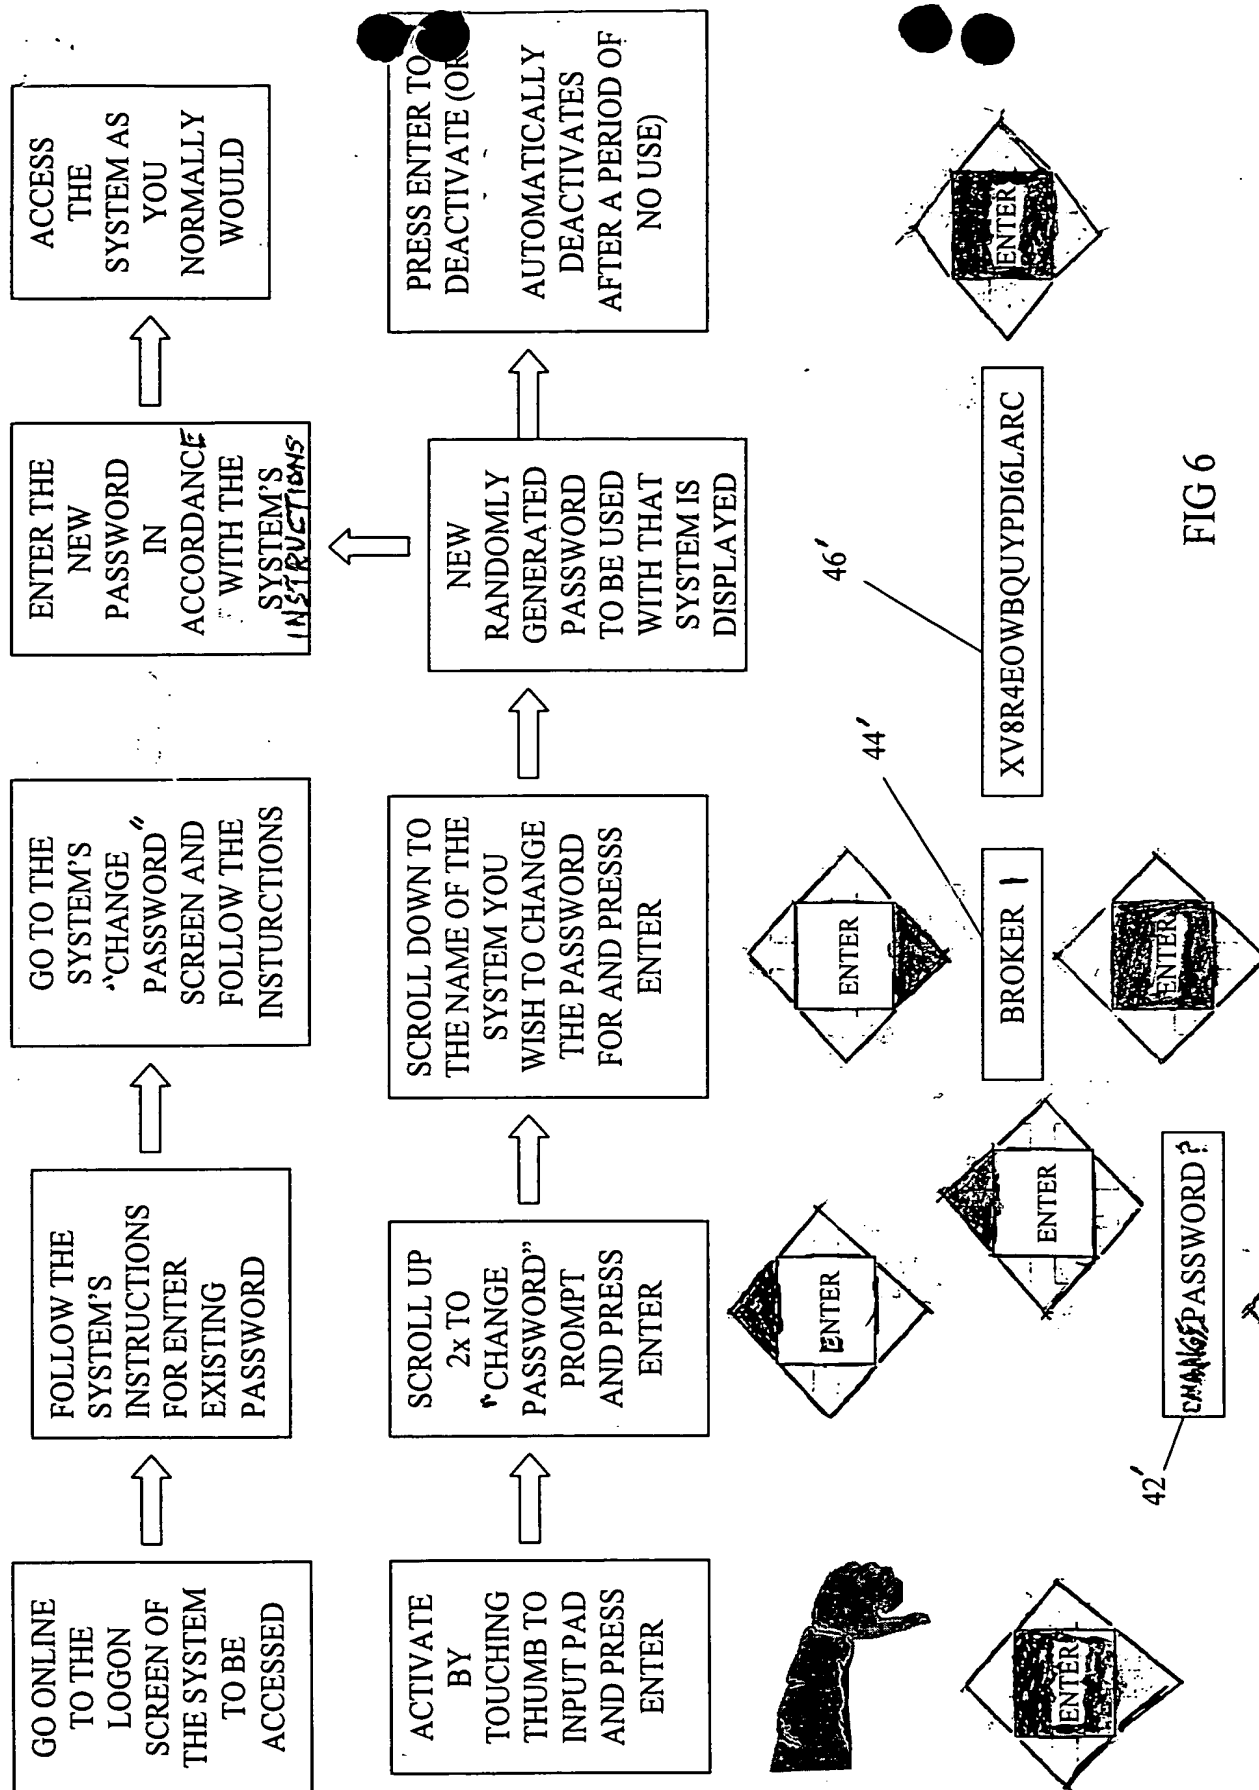


FIG 6

RECALL/DISPLAY

RECALL/  
DISPLAY &  
MANAGE  
MODE

MANAGE

Activate Unit

Generate  
New  
Password  
Mode

Scroll Down to  
Name of  
System  
Password is  
desired for and  
Press Enter

Unit  
Determines if  
Password has  
expired and  
Displays  
Password

If Password has  
expired, Unit will  
flash and display  
"Change  
Password?"  
yes/no

Reading From  
Display Enter  
the Password  
displayed via  
PC Keyboard

Reading From  
Display Enter  
the Password  
displayed via  
PC Keyboard

Turn  
Off Unit

Y

N

Change  
Password?

FIG. 7

50

Scroll Up  
to Entry  
Labeled  
"New  
Password"  
and Press  
Enter

Unit  
Displays  
Blank  
Blinking  
Display

Enter up to 20  
alpha numeric  
characters to  
name the system  
for which the  
password will be  
created and press  
enter

Unit displays a  
template for the  
Password to be  
created-indicate  
format (length;  
a/n positioning;  
security level  
and press enter

Password  
is created  
and  
displayed

Reading  
from Display  
enter the  
password  
displayed via  
keyboard  
PC

Turn  
Off  
Unit